


WARNINGS

 **DANGER**

Fall hazard. Failure to follow warnings or instructions can cause death or serious injury. Before using LadderAnchor the user must:

- **Read and obey all warnings and instructions for proper installation and safe use**
- **Be adequately trained in the safe operation of ladders and follow OSHA and ladder manufacturer's standards for safe ladder use**
- **Place on firm level surface**
- **Ensure ladder and LadderAnchor are free from defect or damage**

For more information visit LadderAnchors.com.

Improper use of the LadderAnchor creates a FALL HAZARD that can lead to serious injury or death.

- Before each use read and obey all warnings, installation instructions, and instructions for safe use.
- Failure to use the ladder properly creates fall hazards that can lead to death or serious injury. Ensure users are adequately trained in the safe operation of ladders.
 - Follow OSHA and ladder manufacturer's standards for safe ladder use and climbing practices
 - Always use three points of contact while climbing the ladder and always work facing the ladder.
 - Always wear proper slip resistant shoes when climbing ladder.
 - Never move, extend, or shift a ladder with user standing on it.
 - Do not reach out too far in any direction while standing on the ladder. Always keep your belt buckle (belly button) centered with ladder and be sure not to over reach.
- Failure to ensure the LadderAnchor is firmly secured to the ground can cause the ladder to fall, which can lead to death or serious injury.
 - Only use LadderAnchor on stable, level surface where LadderAnchor is firmly secured to the ground.
 - Do not place LadderAnchor on ice, gravel, wood chips, under water, or on loose or uneven ground.
 - Do not use ladder or LadderAnchor on rooftops, half walls, work platforms, mobile surfaces (*i.e.*, lifts, vehicles, etc.) or any thing other than the ground.
- Do not use LadderAnchor with a ladder without rotating feet.
- Do not use LadderAnchor near power lines or in inclement weather.
- Using damaged equipment can cause the ladder to fall resulting in death or serious injury.

- Check all equipment for defects or damage (*e.g.*, loose bolts, cracked plastic, broken cleats, damaged rubber, etc.) before each use. Do not use if you observe a defect or damage on equipment.
- Users must be age 18 or older.
- Do not use while under the influence of drugs or alcohol.
- LadderAnchor will provide replacement warning decals upon request. For more information, email info@LadderAnchors.com.

For more information about installation and safe use, or to view updates about this product visit LadderAnchors.com.